


Typical Bioretention Cross-section (N.T.S)

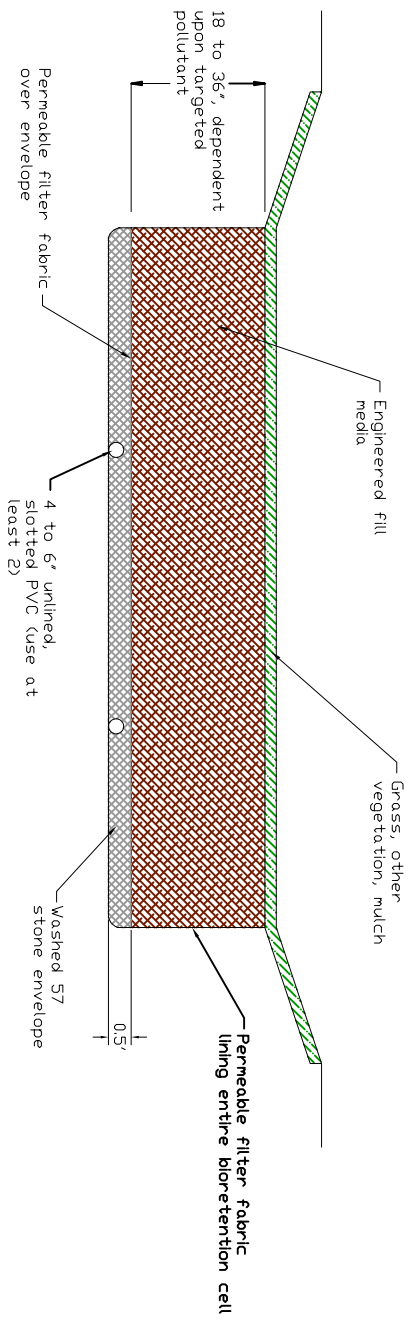

Note: Use inlet protection to dissipate energy and remove sediment (forebay, stone/veg. filter strip, reinforced swale, etc.)