


### Bioretention Elevated Underdrain Outlet (N.T.S)

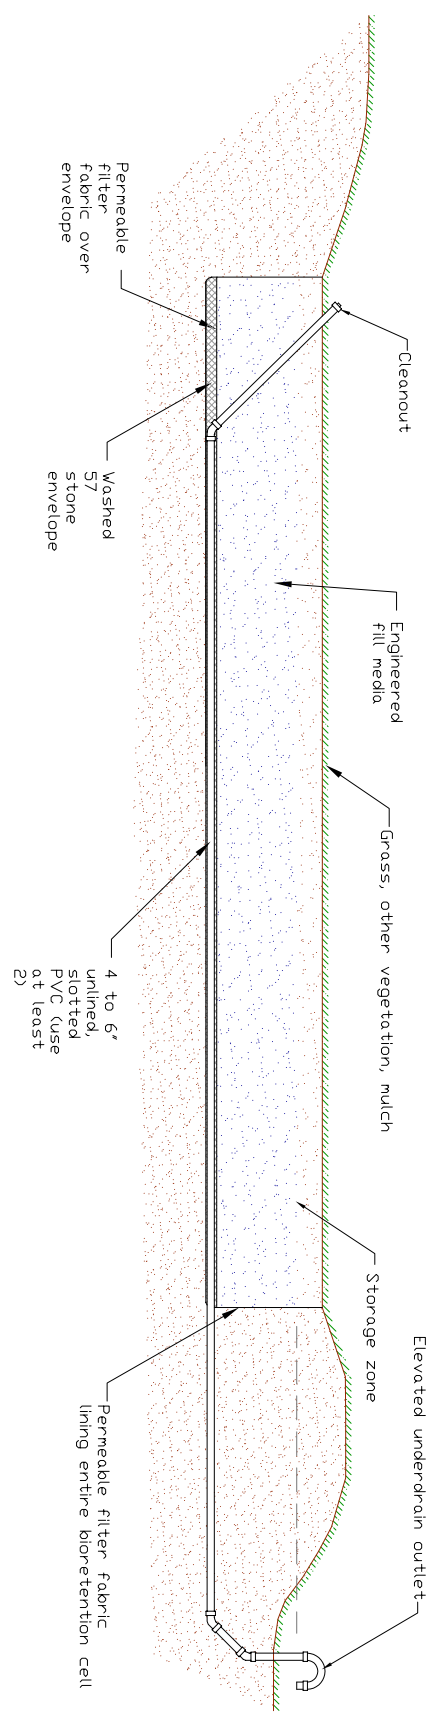

Notes:  
 -Use inlet protection to dissipate energy and remove sediment (forebay, stone/veg. filter strip, reinforced swale, etc.)