


# Bioretention Inlet Protection Under Sheet Flow (N.T.S)

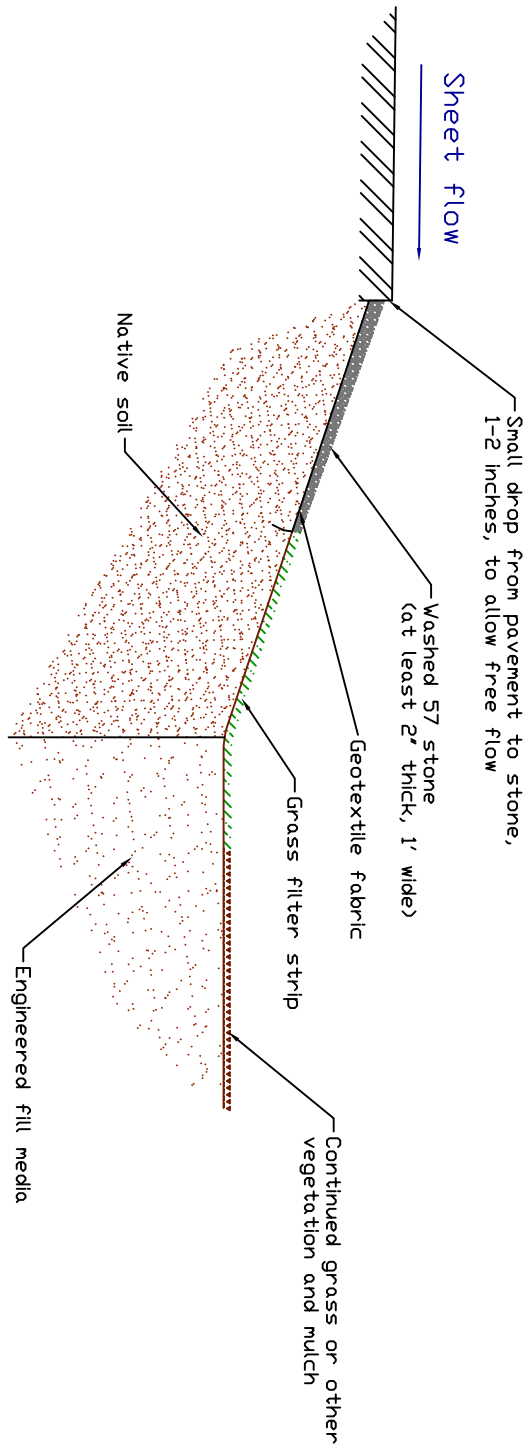

Note: This system is for inlet protection under sheet flow, it is not suitable for concentrated flow